

Wi-Fi Repeater

Manual




Scan the code to view the electronic manual

Jiangmen Todaair Electronics Co., Ltd

Address: Building 8, Wanfengyuan Industrial Area, No. 198, Tianhezong Road,
Pengjiang District, Jiangmen City, Guangdong Province, China 529000
Tel: +86-750-3135725
www.todaair.com

Repeater Indicator Light/Button Instruction

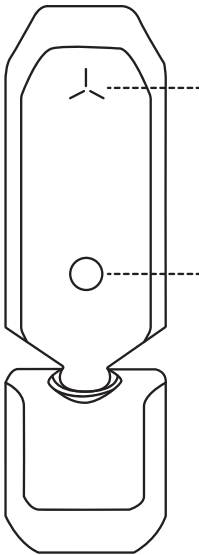

Indicator

1. There are blue and orange colors on the repeater.
2. If the blue indicator is blinking, it means the Internet does not connect.
3. If the blue indicator lights up, it means the Internet have connected successfully.
4. If the orange indicator lights up, it means the signal is weak.
5. If the orange indicator is blinking, it means reset successfully.

RST Button

1. Long press for 12 seconds to reset the device.
2. If the indicator turns orange and blinks, the reset is successful.

Note: It need to wait at least 3 minutes for reset.

Repeater Indicator Light/Button Instruction

Indicator


1. There are blue and red colors on the repeater.
2. If the blue indicator is blinking, it means the Internet does not connect.
3. If the blue indicator lights up, it means the Internet have connected successfully.
4. If the red indicator lights up, it means the signal is week.
5. If the red indicator is blinking, it means reset successfully.

PoE 48V Input


DC 12V

RST Button

1. Long press for 12 seconds to reset the device.
 2. If the indicator turns orange and blinks, the reset is successful.
- Note: It need to wait at least 3 minutes for reset.

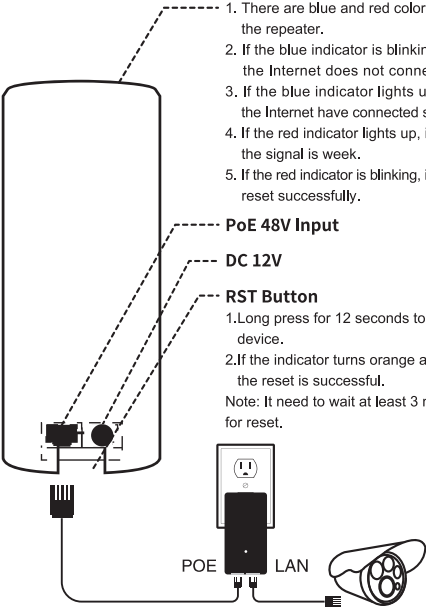


Repeater Indicator Light/Button Instruction

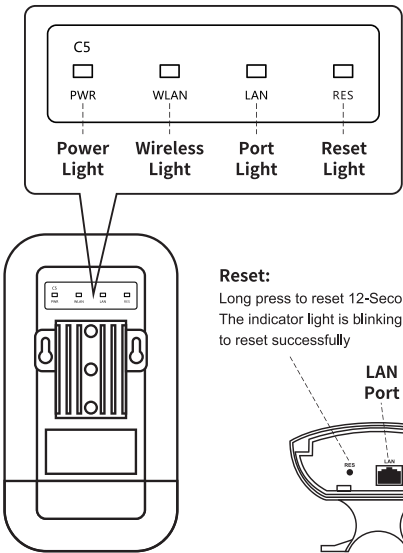


Reset:

Long press to reset 12-Second
The indicator light is blinking to reset successfully

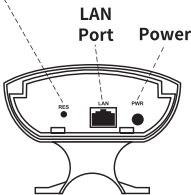

I .Computer Configuration Repeater Steps

1.After the device starts up, find the name of TDair WiFi and click to Connect

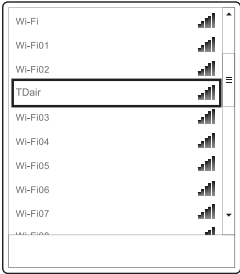

2.The browser automatically pops up the login page.If the browser does not automatically pop up, manually open the browser and enter 192.168.34.1. Default password: admin

Administrator Password

Please Enter Password

English

Login

Forget Password

II.Steps For Configuring A Repeater On The Mobile Phone

1.Open the WiFi option on the mobile phone and select the default name of the repeater TDair connection



2.The phone automatically jumps to the configuration page. If the browser does not automatically pop up, manually open the browser and enter 192.168.34.1. Default password: admin

Administrator Password

Please Enter Password

English

Login

Forget Password

III.The Step of WIFI Repeater Configuration

1. Enter the configuration guide and click "Scan". The repeater will automatically scan for nearby WIFI device

Cannot Scan the Signal ?

Survey

Skip

2. After scanning out the WIFI name, click to select the WIFI signal source that you need to repeat, then click to select it and go to the next step (You can fill in the SSID by itself if you click "Next" directly)

Wi-FiList

SSID	Select
TodaAir_9ABD 5G	<input type="checkbox"/>
360-24	<input type="checkbox"/>
TodaAir_EEFF 5G	<input type="checkbox"/>
360-24 5G	<input checked="" type="checkbox"/>
TodaAir_9ABD	<input type="checkbox"/>

Next

III.The Step of WIFI Repeater Configuration

3.Enter the WIFI password of superior router (Note: If you fill in the SSID by itself, you need to choose the wireless channel of the router)

Wireless

Superior Router

* SSID

360-24

* Security

WPA2-PSK(TKIP,CCMP)

* PSK Password

Channel

52

4.Click to save the configuration to complete the wireless repeater configuration (The default repeater Wi-Fi password is the same as the superior router Wi-Fi password, or you can modify the Wi-Fi name and password by yourself)

Repeater

Relay Mode

☒ Universal Repeater ?

☐ WDS Repeater ?

2.4G Wireless

360-24_2G

Name

5G Wireless Name

360-24_5G

Dual-band in one

☐

* Security

WPA2-PSK(TKIP,CCMP)

* PSK Password

Prev

Confirm

